


HOW TO UNLOCK AND LIFT A SEPTIC TANK LID

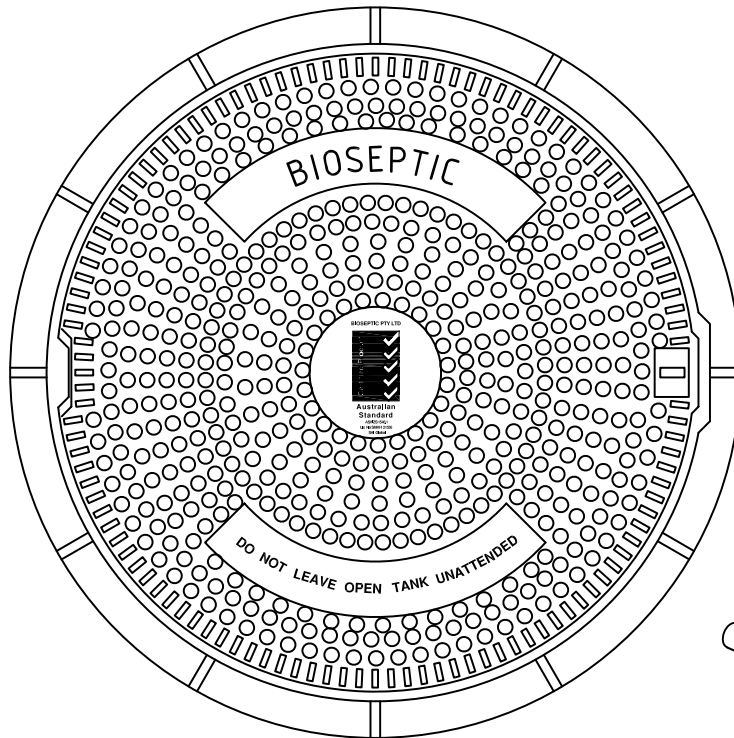

1. Locate key onto lock and push down
2. Turn key 1/4 turn anti-clockwise

